



INFORMATION SERVICE BULLETIN

Volume 44, Number 2
Page 1 of 2

USING NITROGEN TO INFLATE PASSENGER AND LIGHT TRUCK TIRES

INTRODUCTION & PURPOSE

Nitrogen may be offered as an alternative to air for tire inflation.* The purpose of this bulletin is to provide general information about inflating tires with nitrogen.

Tires are designed and built to provide many thousands of miles of excellent service but must be maintained properly. The key element of tire maintenance is maintaining the proper inflation pressure. The proper inflation pressure is recommended by the vehicle manufacturer, which can be found on the vehicle's tire placard or in the owner's manual. It is recommended to check tire inflation pressure at least every month and before every long trip.

USING NITROGEN IN TIRES

Nitrogen is an inert (non-flammable) gas—basically, nothing more than dry air with oxygen removed (air contains about 78% nitrogen). Because of its inert properties, nitrogen is often used in highly specialized service applications and/or demanding environments. For instance, aircraft, commercial/heavy applications and mining utilize nitrogen to help reduce the risk of internal combustion (fire) if the brake/rim/wheel components overheat. Also, dry nitrogen is used in professional racing to help reduce variation in inflation pressures (caused by moisture) where even small differences in pressure can affect vehicle handling at the extreme limits of performance.

For normal tire service applications, nitrogen inflation is not necessary. However, nitrogen inflation is permissible as its properties may contribute to minor reductions in inflation pressure loss. Nevertheless, several other sources of pressure leaks, such as punctures, tire/rim interface (bead), valve, valve/rim interface, and the wheel, may negate the benefit of nitrogen. If the tire inflation pressure is below the pressure specified on the vehicle tire placard, certification label or owner's manual, the tire must be re-inflated—whether with air or nitrogen—to the proper inflation pressure. Do not operate tires underinflated and/or overloaded.

WARNING

Under inflation and/or over loading of a tire causes excessive heat build-up and internal structural damage. This may cause a tire failure, including tread/belt separation, even at a later date, which can lead to an accident and serious personal injury or death.

Consult the vehicle tire placard, certification label and owner's manual for the recommended vehicle load limits and tire inflation pressures.

Depending on nitrogen alone to reduce the requirements for inflation maintenance may lead to underinflated operation, which may result in premature tire failure. With the right amount of inflation pressure, the vehicle and tires will achieve their optimum performance. In addition to tire safety, this means your tires will wear longer and improve vehicle fuel consumption.

Nitrogen and air can be mixed in any and all proportions. Nitrogen filled tires can and should have air added whenever nitrogen is not readily available, to maintain proper inflation as specified by the vehicle manufacturer.

Whether inflated by air or nitrogen, regular inflation pressure maintenance remains critical and necessary. Use of nitrogen alone is not a replacement for regular inflation pressure maintenance.

*For information on storing and handling nitrogen, follow the manufacturer's and/or the supplier's safety guidelines.

This Bulletin Replaces Volume 44, Number 1

This is a publication of the Rubber Manufacturers Association.

All rights reserved. The contents of this publication may not be reprinted or otherwise reproduced in any form without the express written permission of RMA.

To order RMA publications, call 202-682-4800 or go online www.rma.org and click on Publications.